


NO	DESCRIPTION	PARTS NO.	Q.ty
1	POLY BAG		1
2	CARD WARRANTY	CQE1A172X	1
3	HARMAN IMAGE BROCHURES	HQE1A273Z	1
4	SHEET, IMPORTANT	CQE1A169Z	1
5	OWNER'S MANUAL	CQX1A1050Z	1
6	BATTERY		2
7	CORD,PIN(3P,W/R/Y)	CJS4S004Z	1
8	CABLE,S-VHS(1.5M)	CJS0I006Z	1
9	CORD,JACK(MONO)1200MM	CJS9D002Z	1
10	AC CORD	CJA2A085Z	1
11	CABLE,HDMI(2M)	CJS8T001Z	1
12	STAPLE		3

## DVD 47 PACKAGING & ACCESSORIES

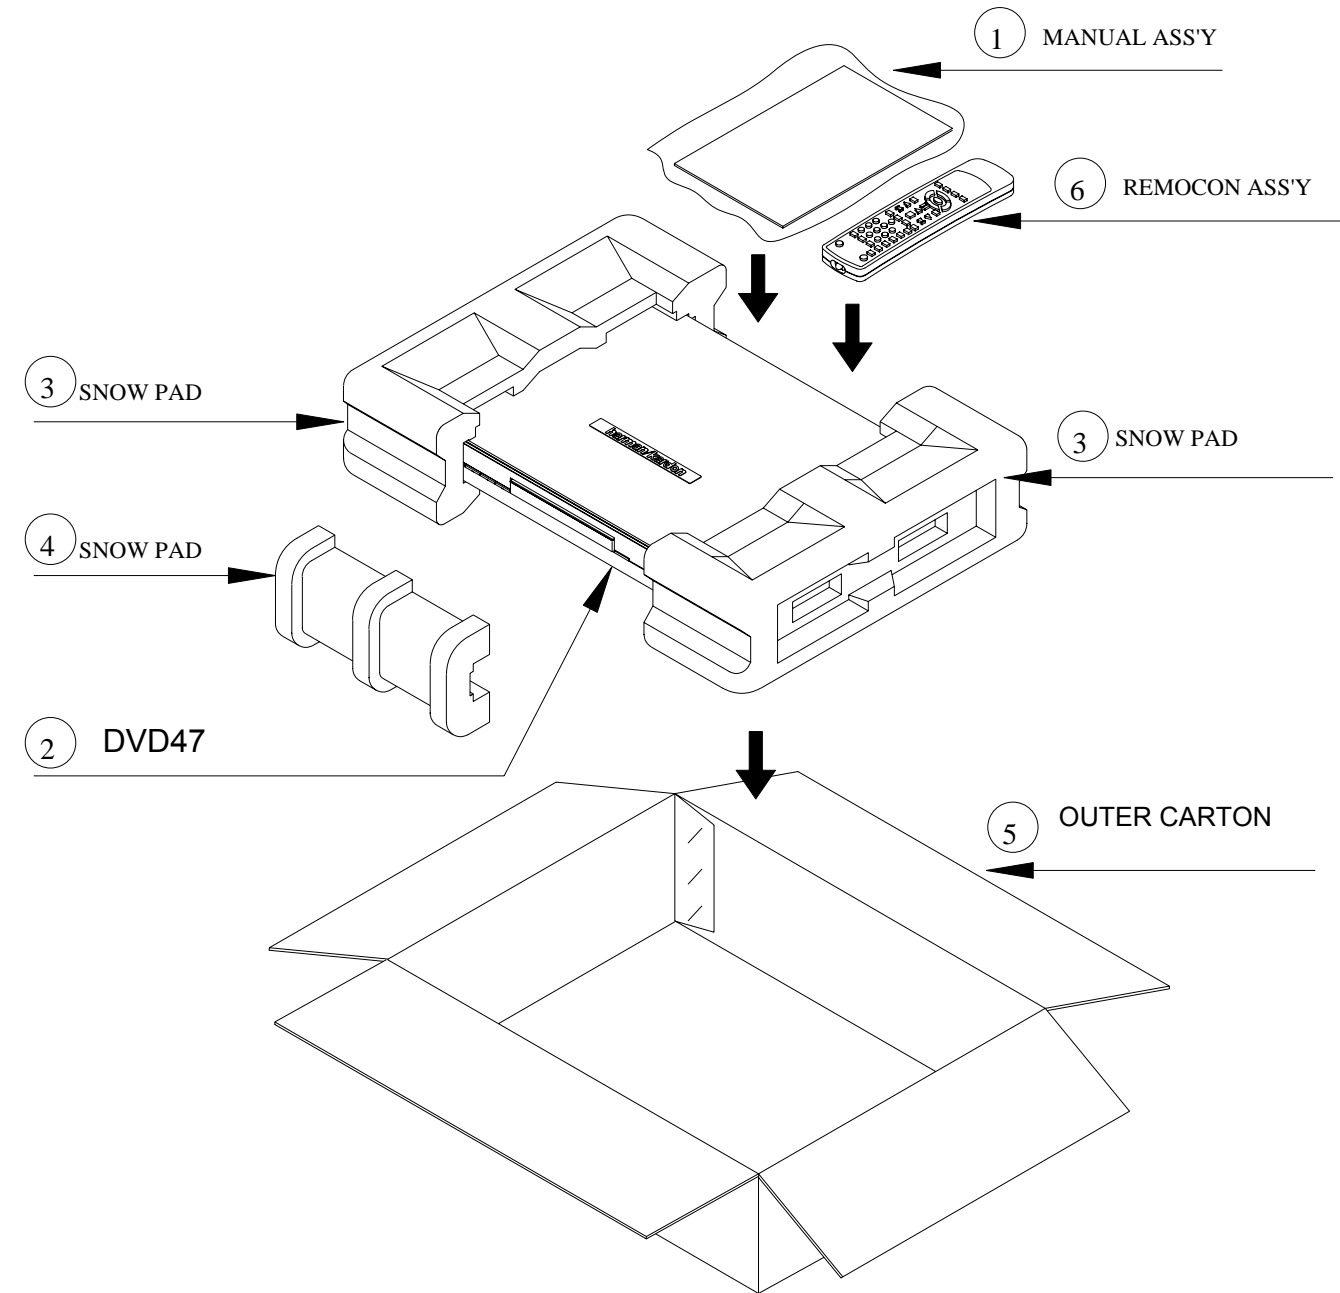

NO	DESCRIPTION	PARTS NO.	Q.ty
1	MANUAL ASS'Y		1
2	DVD47	DVD 47	1
3	SNOW,PAD	CPS1A714	2
4	SNOW,PAD	CPS1A715	1
5	DVD 47 OUTER CARTON	CPG1A798X	1
6	REMOCON ASS'Y	CARTDVD47	1
7			