


AVR 240 FRONT-PANEL CONTROLS

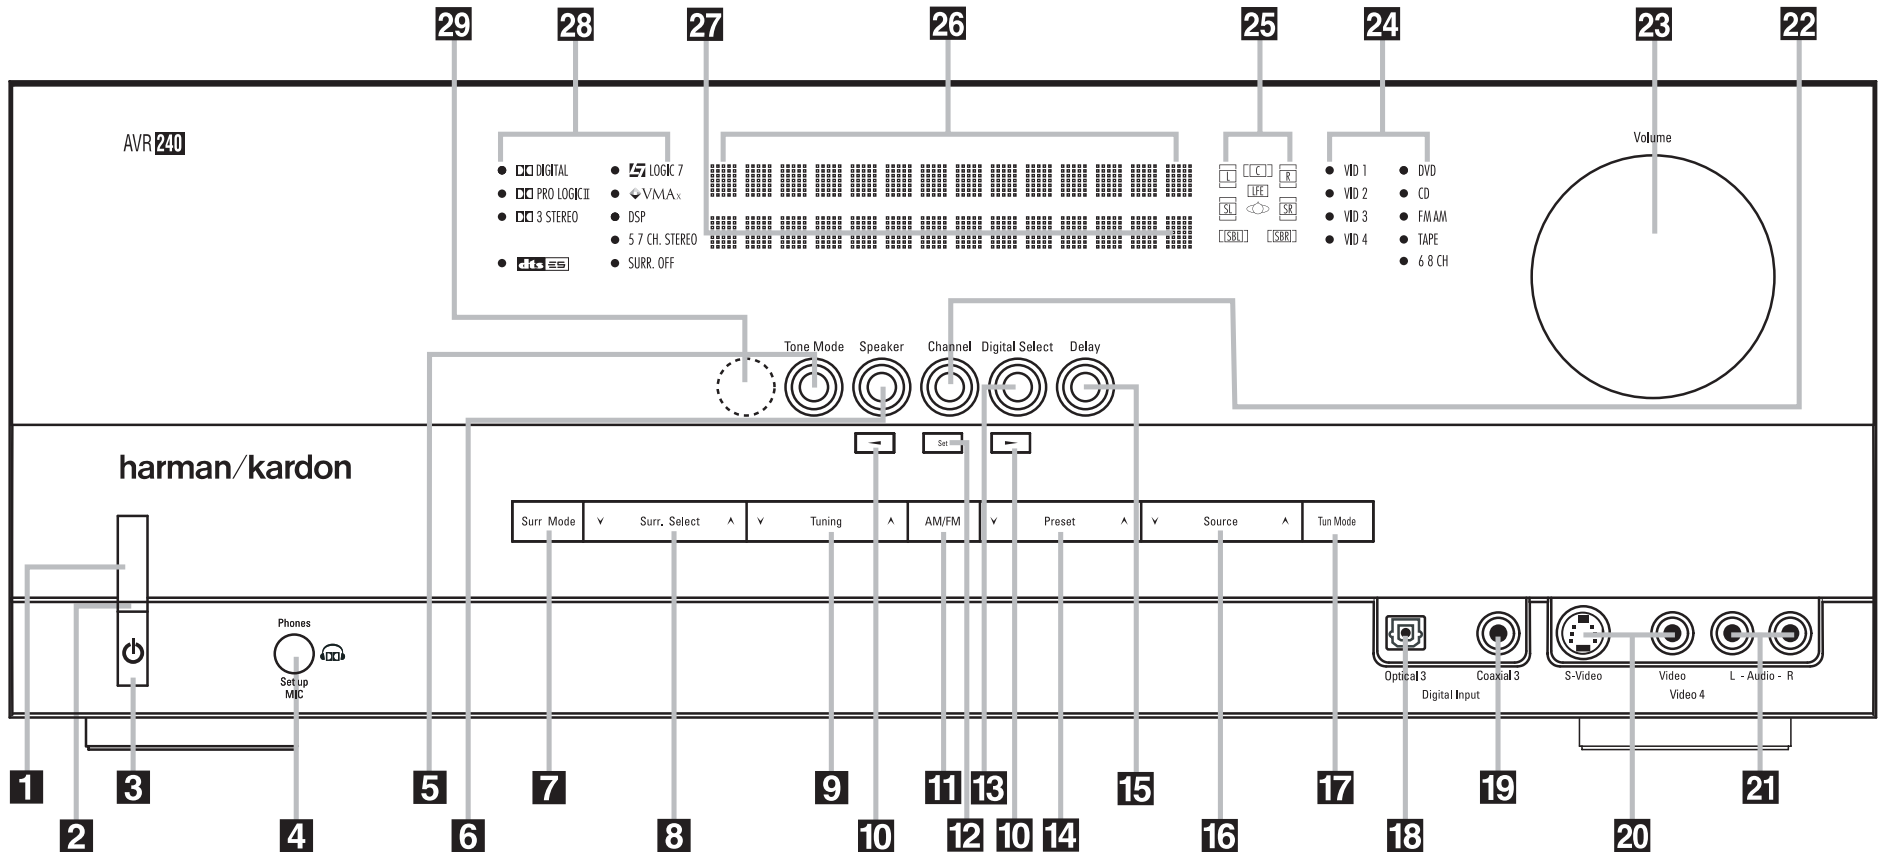

1 Main Power Switch

2 Power Indicator

3 Standby/On Switch

4 Headphone Jack

5 Tone Mode

6 Speaker Selector

7 Surround Mode Group Selector

8 Surround Mode Selector

9 Tuning Selector

10 ◀▶ Buttons

11 Tuner Band Selector

12 Set Button

13 Digital Input Selector

14 Preset Station Selector

15 Delay Adjust Selector

16 Input Source Selector

17 Tuner Mode Selector

18 Optical 3 Digital Audio Input

19 Coaxial 3 Digital Audio Input

20 Video 4 Video Input Jacks

21 Video 4 Audio Input Jacks

22 Channel Adjust Selector

23 Volume Control

24 Input Indicators

25 Speaker/Channel Input Indicators

26 Upper Display Line

27 Lower Display Line

28 Surround Mode Indicators

29 Remote Sensor Window