


DVD 37 CONNECTION GUIDE 1

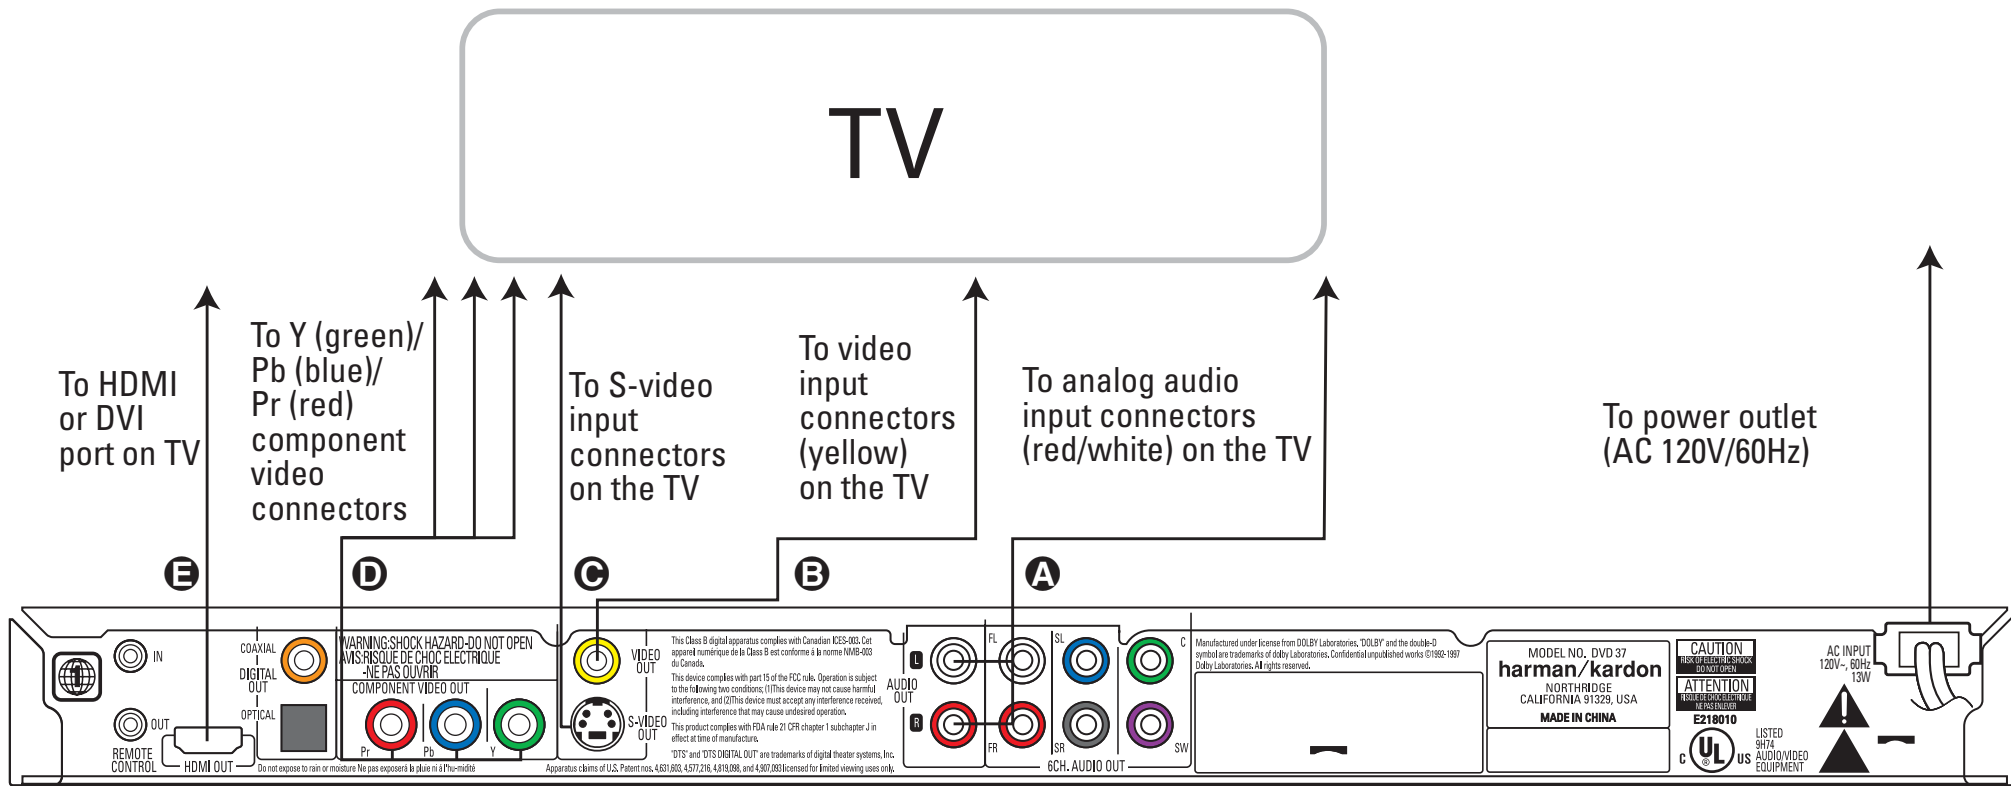

Connecting to a TV Only

When using the DVD 37 with a television but no audio receiver or processor, connect it as follows. Make the **Analog Audio Connection A** and one of the **Video Connections (Composite Video B, S-Video C, Component Video D)**.

If your television or video display is HDMI-capable, you only need to make the **HDMI E** connection, as it handles both audio and video. Remember to plug in the power cord.

IMPORTANT NOTE: Make certain that any device being connected, including the DVD 37, your receiver or processor and your TV or video display, is turned off whenever you make connections between products.