


DVD 37 FRONT-PANEL INFORMATION DISPLAY

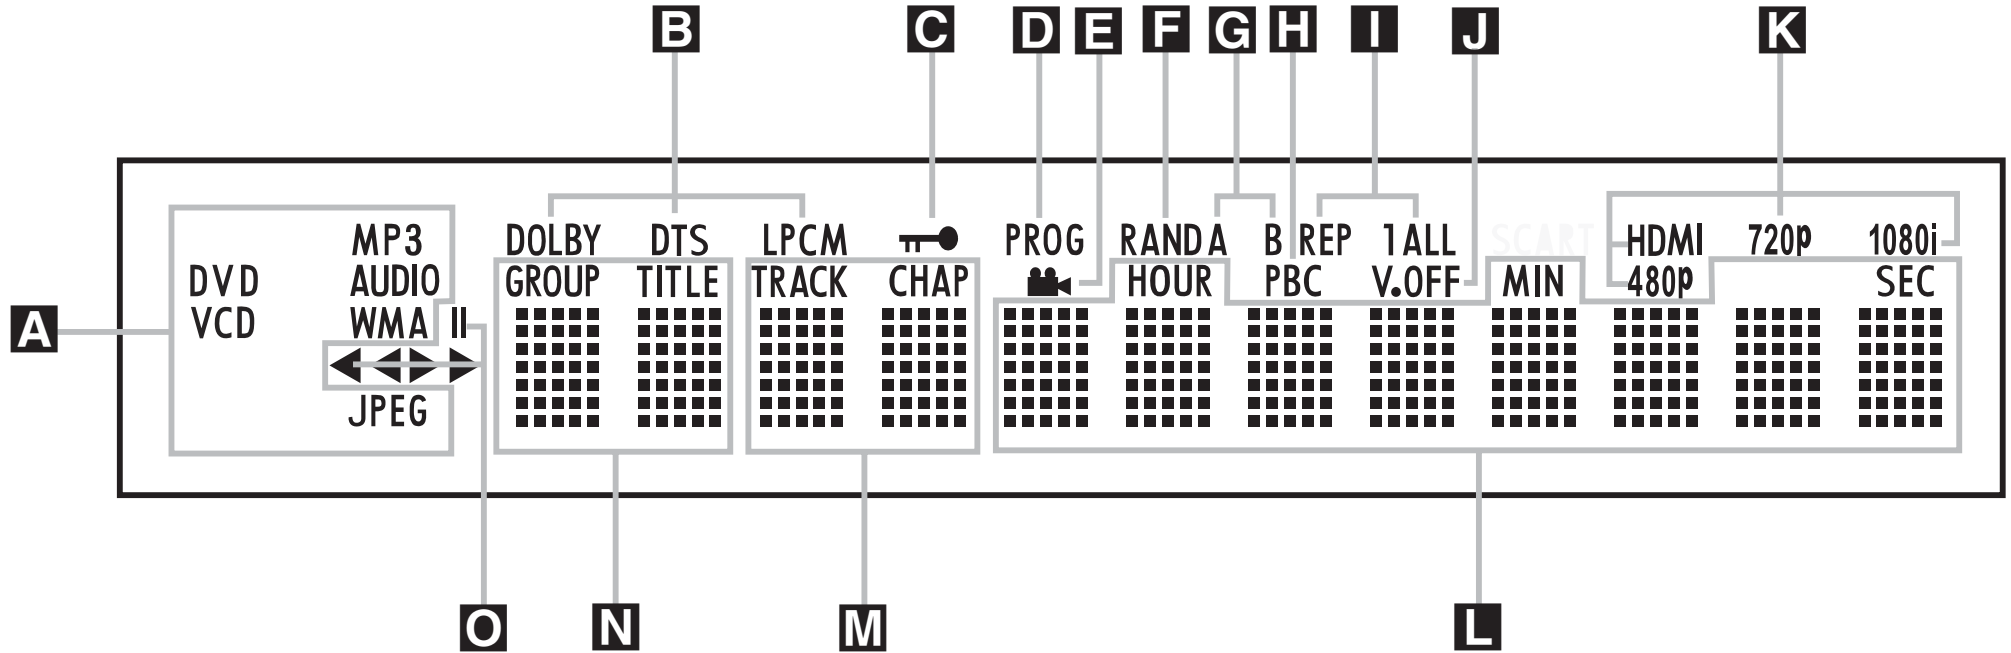

- A** Disc-Type Indicators
- B** Audio Bitstream Indicators
- C** Parental Lock Indicator
- D** Program Indicator
- E** Angle Indicator
- F** Random Indicator
- G** A-B Repeat Indicator
- H** VCD Playback Control Indicator

- I** Repeat Indicators
- J** V-OFF Indicator
- K** Video Indicators
- L** Time Indicators
- M** Chapter/Track Number Indicators
- N** Group/Title Indicators
- O** Playback-Mode Indicators