

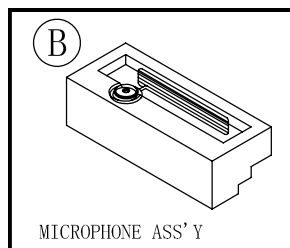
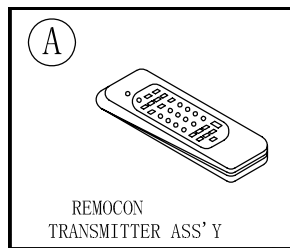


1. Instruction manual ass'y - Accessories

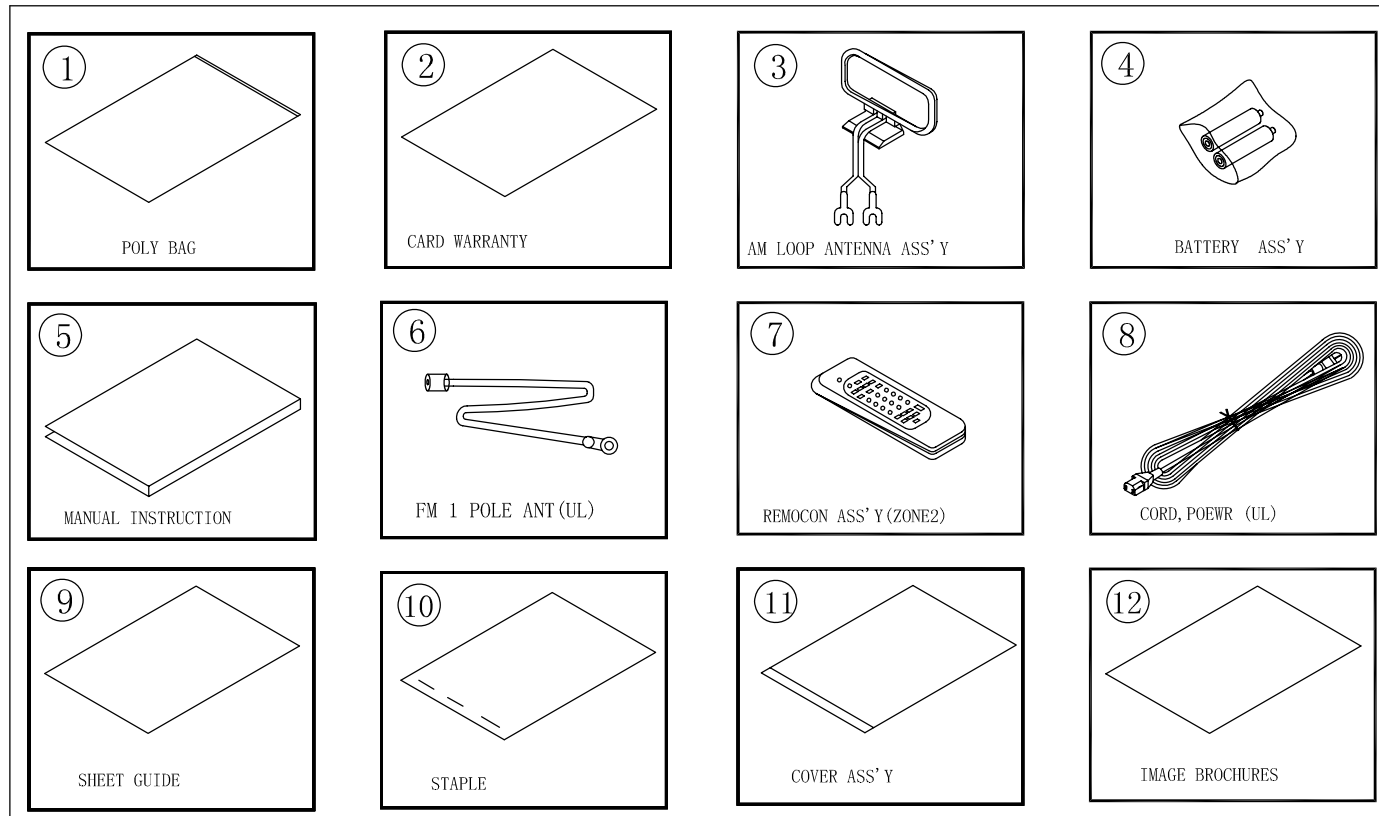

NO	DESCRIPTION	PARTS NO.	Q, ty
1	POLY BAG		1
2	CARD WARRANTY	CQE1A172X	1
3	AM LOOP ANTENNA ASS' Y	CSA1A027Z	1
4	BATTERY		2
5	Owner's Manual		1
6	FM 1 POL ANT (UL)	CSA1A019Z	1
7	REMOCON ASS' Y (ZONE2)	CARTZONE24	1
8	CORD, POWER (UL)	CJA2A070Z	1
9	SHEET GUIDE	CQE1A384Z	1
10	STAPLE		3
11	COVER ASS' Y		1
	1 COVER A	CGR2A436	1
	2 COVER B	CGR2A437	1
	3 ORNAMENT , AL A	CGX1A391C66	1
	4 ORNAMENT , AL B	CGX1A392C66	1
	5 SHEET, FRONT COVER	CQE1A219Z	1
	6 PAD , COVER	CPS1A676	1
	7 BAG , POLY		1
12	IMAGE BROCHURES		1
A	REMOCON ASS' Y	RB46G00	1
B	MICROPHONE ASS' Y	CJXAVR340MICRO	1

2. Package Drawing

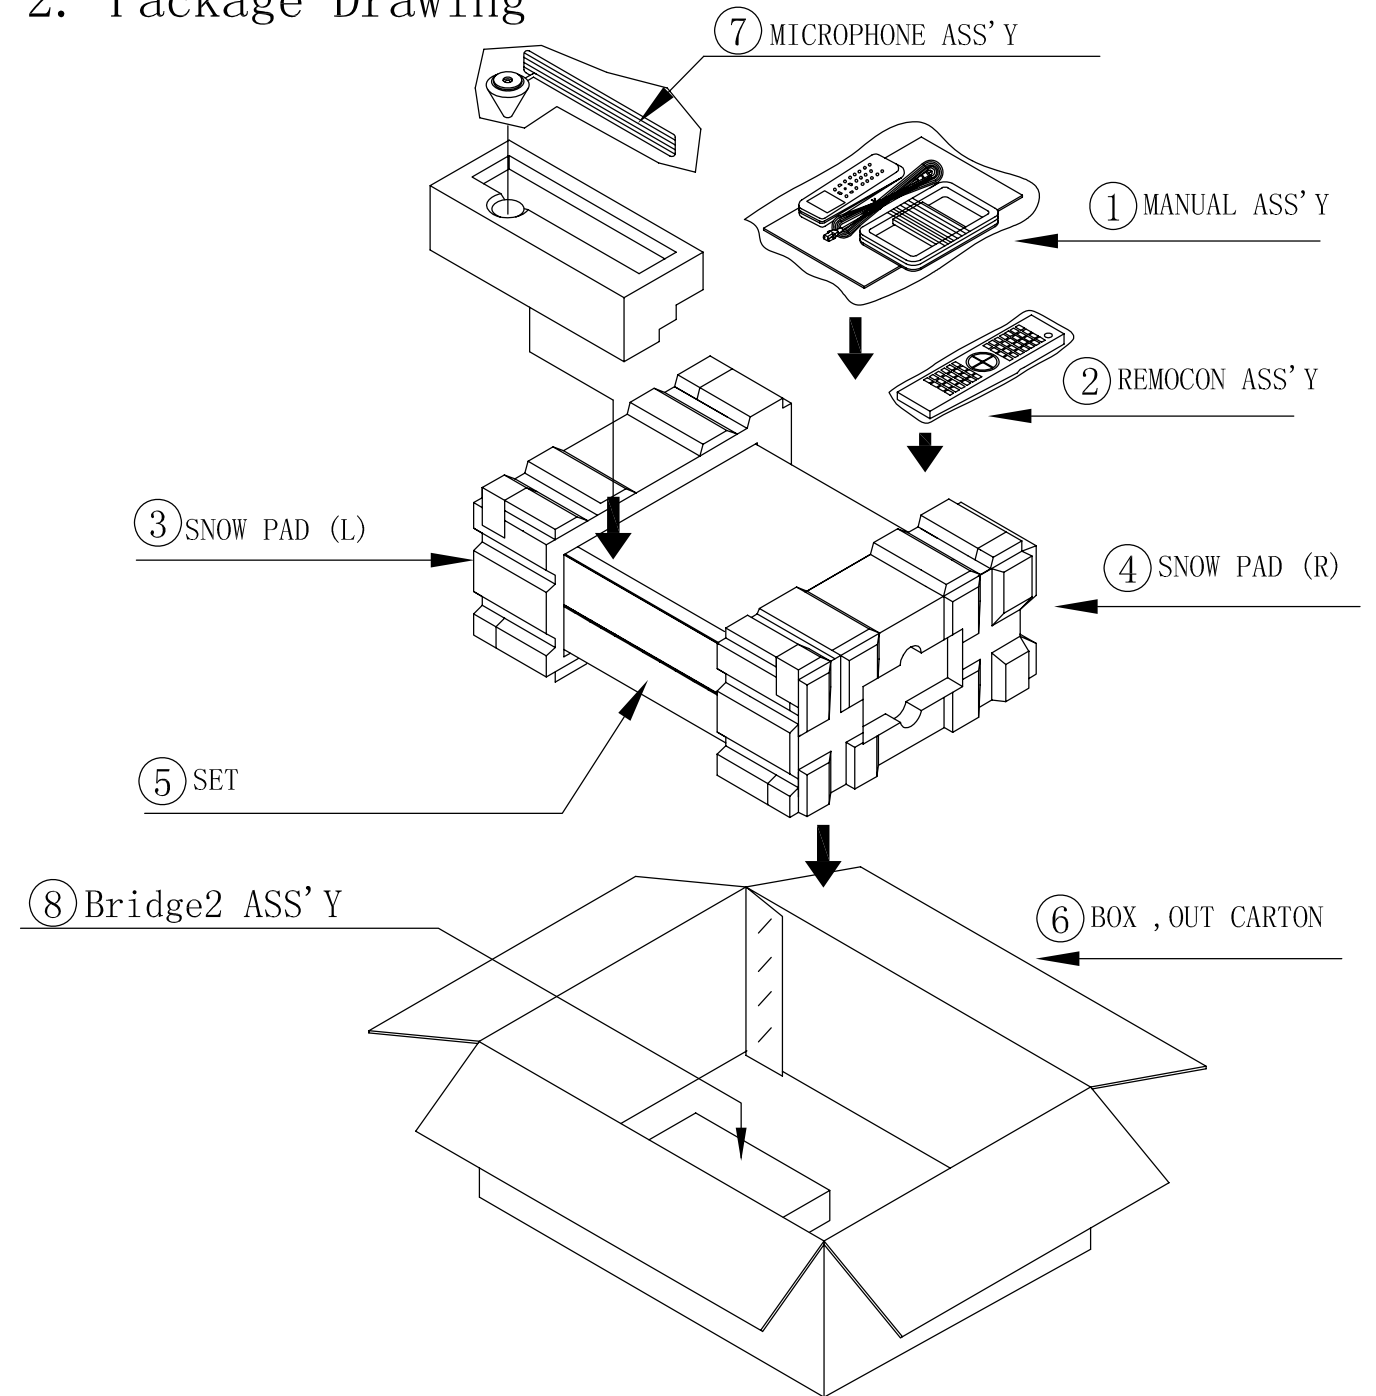

NO	DESCRIPTION	PARTS NO.	Qty
1	ACCESSORY-1		1
2	REMOCON ASS' Y	RB46G00	1
3	SNOW, PAD (L)	CPS5A564Z	1
4	SNOW, PAD (R)	CPS5A565Z	1
5	AVR 3550HD	AVR 3550HD	1
6	BOX, OUT CARTON	CPG1A855X	1
7	MICROPHONE ASS' Y	CJXAVR340MICRO	1
8	BRIDGE 2 ASS' Y	CXZBRIDGE2354	1