


AVR 7300 FRONT-PANEL CONTROLS

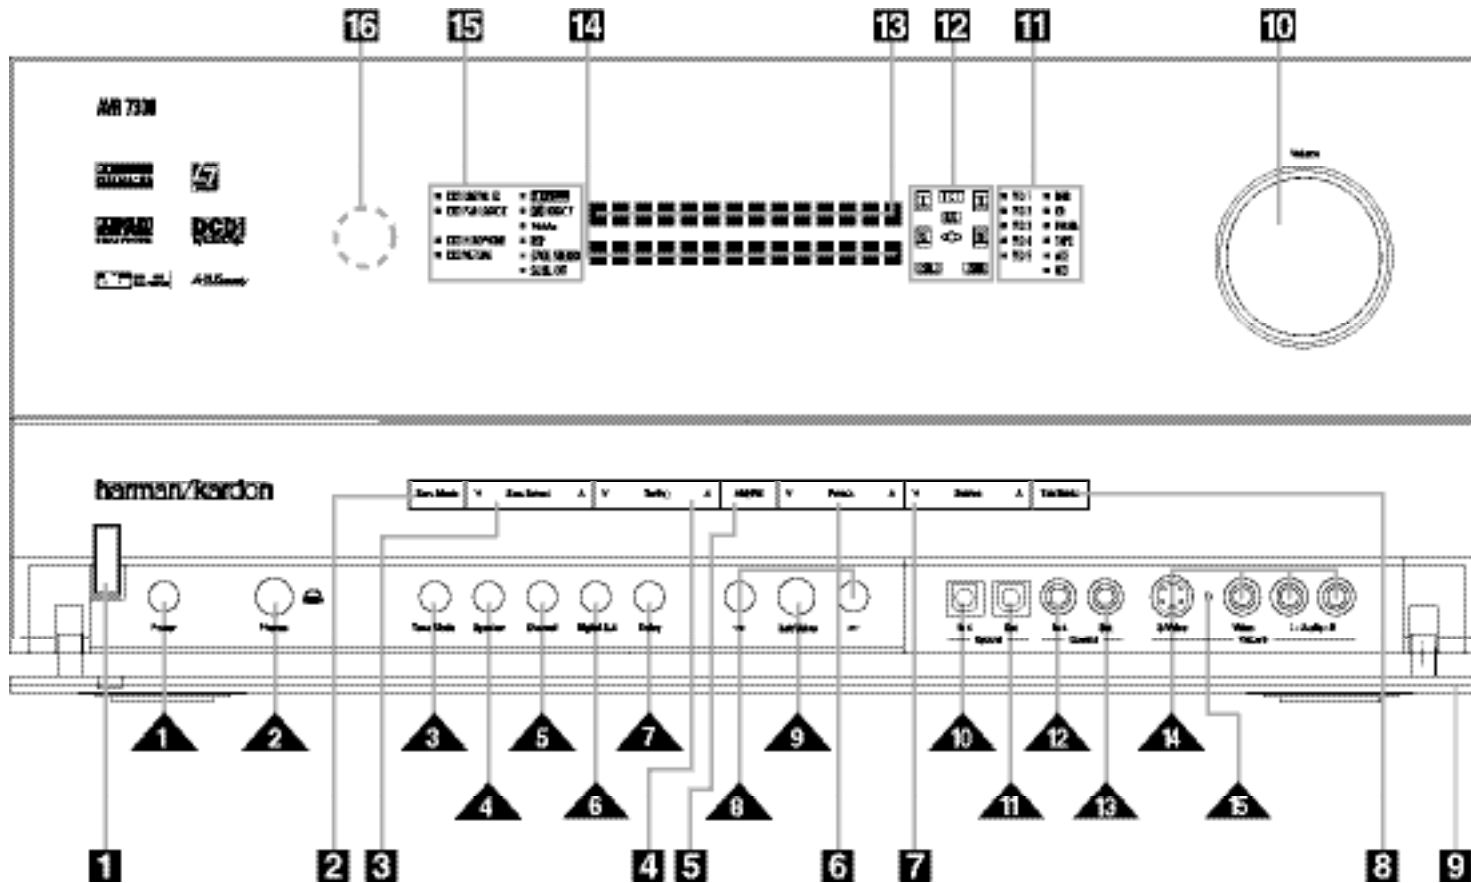

The following controls and indicators are available on the AVR 7300's front panel:

- | | | | |
|---------------------------------------|-----------------------------------|--|------------------------------------|
| 1 Standby/On Button | 5 Tuner Band Selector | 9 Front-Panel Control Door | 13 Upper Display Line |
| 2 Surround Mode Group Selector | 6 Preset Stations Selector | 10 Volume Control | 14 Lower Display Line |
| 3 Surround Mode Selector | 7 Input Source Selector | 11 Input Indicators | 15 Surround Mode Indicators |
| 4 Tuning Selector | 8 Tuner Mode Selector | 12 Speaker/Channel Input Indicators | 16 Remote Sensor Window |

The following controls and jacks are located behind the **Front-Panel Control Door 9**. To open the door, gently press the left or right bottom-corner edge of the door in and gently swing the door down towards you.

- | | | | |
|----------------------------------|----------------------------------|-----------------------------------|-------------------------------------|
| 1 Main Power Switch | 5 Channel Adjust Selector | 9 Set/Video Button | 13 Coaxial Digital Output |
| 2 Headphone Jack | 6 Digital Input Selector | 10 Optical 4 Digital Input | 14 Video 5 Audio/Video Jacks |
| 3 Tone Mode Button | 7 Delay Adjust Selector | 11 Optical Digital Output | 15 Input/Output Indicator |
| 4 Speaker Selector Button | 8 ◀▶ Buttons | 12 Coaxial 4 Digital Input | |