


DVD 27 CONNECTION GUIDE

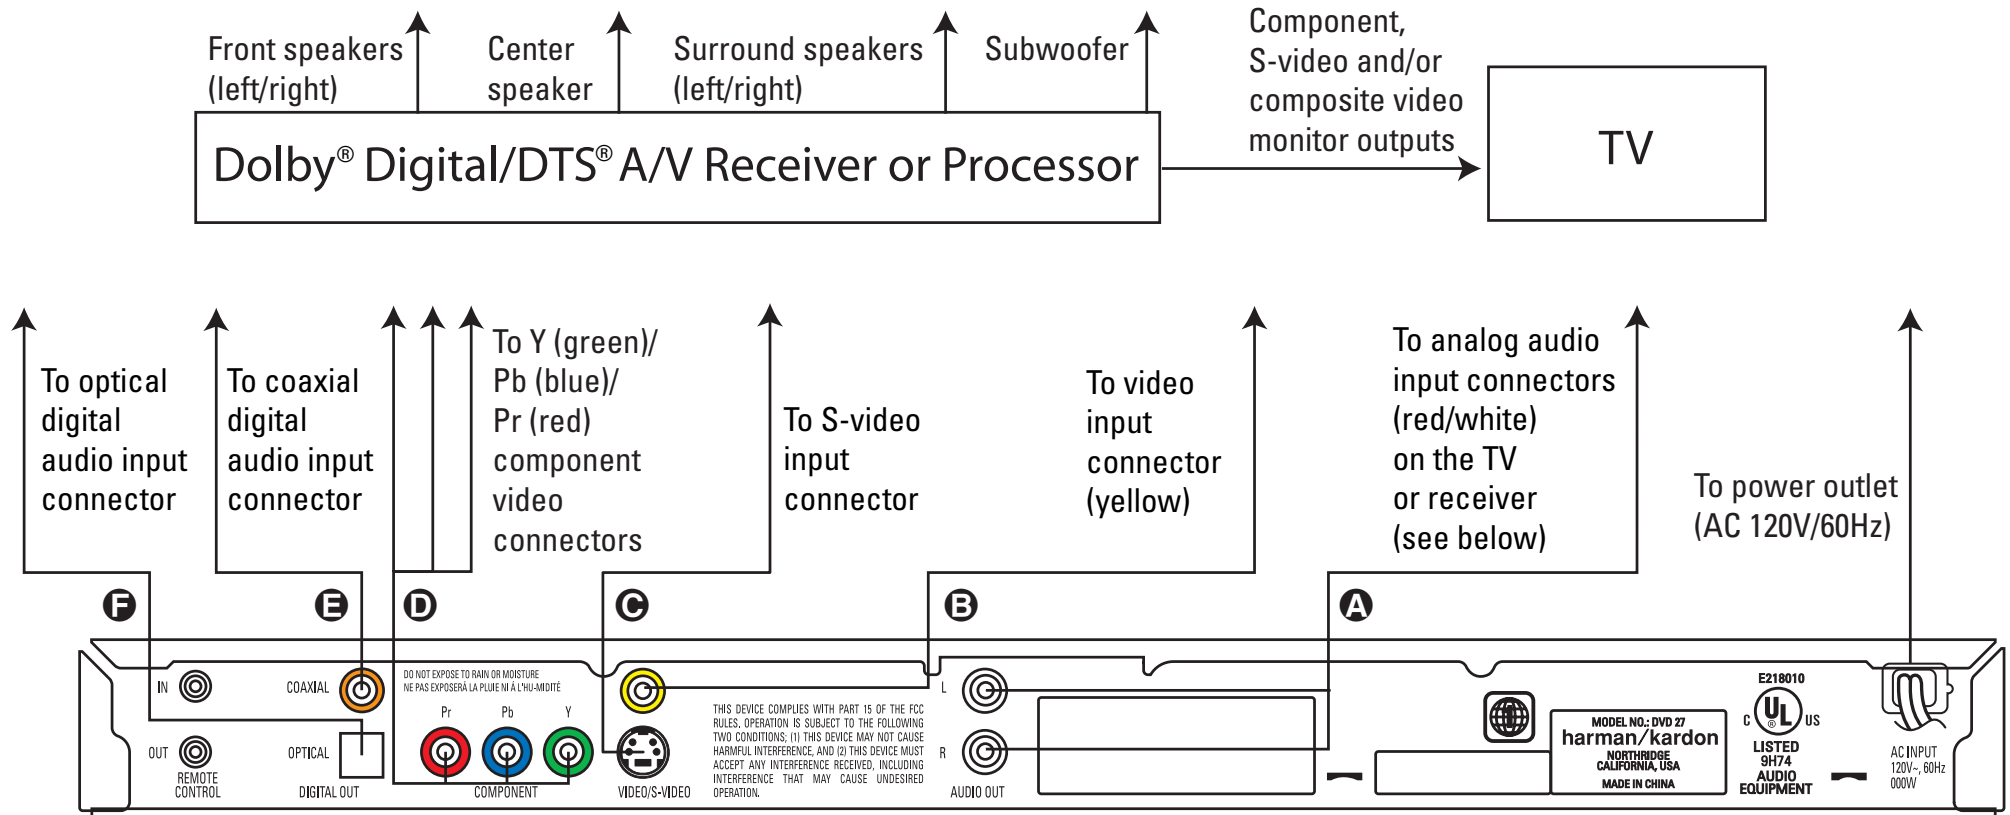

Connecting to a Receiver

When using the DVD 27 with an audio/video receiver or processor, connect it as follows. First, make one of the video connections (**Composite Video B**, **S-Video C** or **Component Video D**) to the video input jacks on the A/V receiver, and then connect the receiver's video monitor output to the TV. If you will sometimes use the TV without the audio component, you may optionally make the **Analog Audio Connection A** to the TV.

Second, make either the **Coaxial Digital Audio Connection E** or the **Optical Digital Audio Connection F** to the receiver or processor. If your receiver/processor has multiroom capability, you may also connect the DVD 27's analog audio outputs to the DVD analog audio inputs on the receiver.

IMPORTANT NOTE: Make certain that any device being connected, including the DVD 27, your receiver or processor and your TV or video display, is turned off whenever you make connections between products.