

DVD 37 REMOTE CONTROL FUNCTIONS

- 1** Power On
- 2** Open/Close
- 3** Audio Select
- 4** Clear
- 5** Playlist
- 6** Repeat
- 7** A-B Repeat
- 8** Random
- 9** Info
- 10** Setup
- 11** Previous Step/Skip
- 12** Search/Slow Reverse
- 13** Angle
- 14** ▲/▼/◀/▶ Navigation Buttons
- 15** Light
- 16** Video Off
- 17** Audio Mode Selector
- 18** HD Mode Selector
- 19** Dimmer
- 20** Progressive Scan/Interlaced
- 21** Enter
- 22** Pause
- 23** Zoom
- 24** Play
- 25** Search/Slow Forward
- 26** Stop
- 27** Next Step/Skip
- 28** Disc Menu
- 29** Status
- 30** Numeric Keys
- 31** Title
- 32** Subtitle
- 33** Power Off
- 34** IR Emitter

