

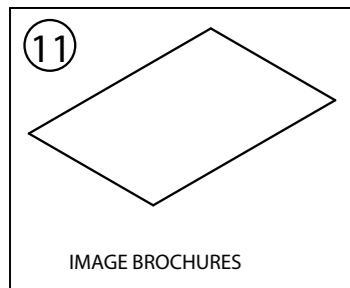
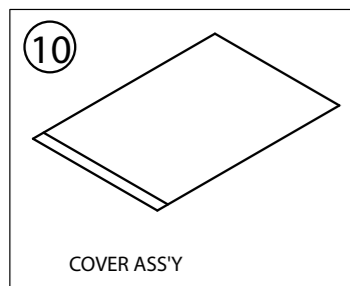
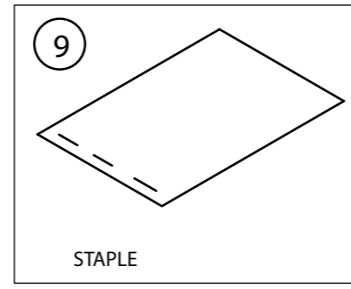
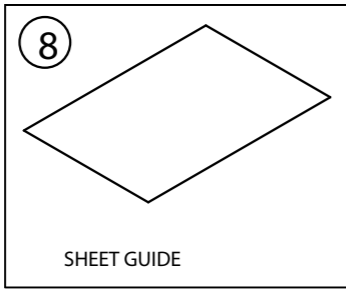
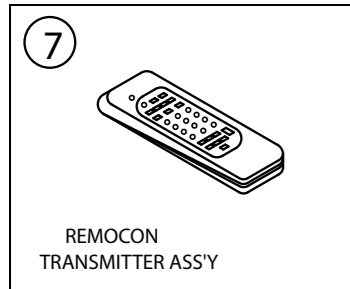
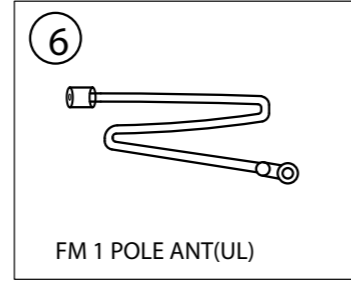
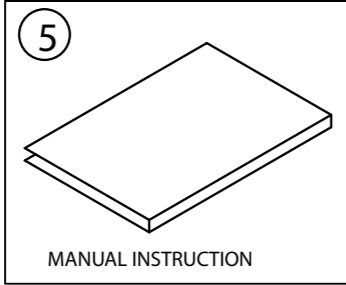
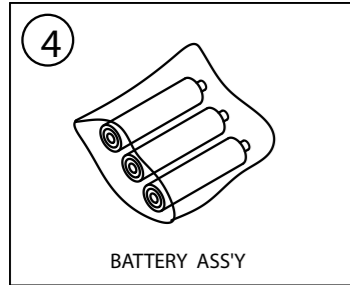
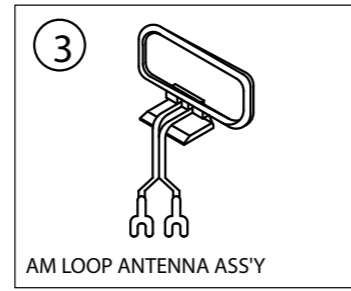
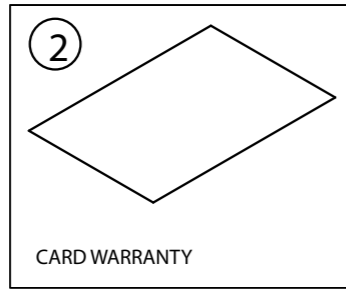


### 1. Instruction manual ass'y - Accessories

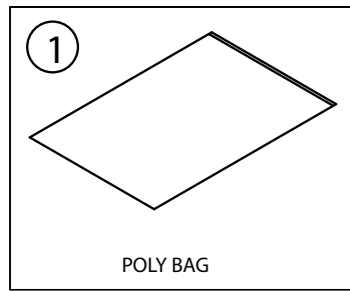

| NO | DESCRIPTION                   | PARTS NO.  | Q,ty |
|----|-------------------------------|--|------|
| 1  | POLY BAG                      |  | 1    |
| 2  | CARD WARRANTY                 | CQE1A172X  | 1    |
| 3  | AM LOOP ANTENNA               | CSA1A020Z  | 1    |
| 4  | BATTERY                       |  | 3    |
| 5  | INSTRUCTION MANUAL            | visit <a href="http://www.harmankardon.com">www.harmankardon.com</a> | 1    |
| 6  | FM 1 POL ANT(UL)              | CSA1A019Z  | 1    |
| 7  | REMOCON TRANSMITTER ASS'Y     | CARTAVR154   | 1    |
| 8  | SHEET GUIDE(QUIK START GUIDE) | CQE1A379Z  | 1    |
| 9  | STAPLE                        |  | 3    |
| 10 | COVER ASS'Y                   | CGRAVR154ZA  | 1    |
|    | 1 COVER A                     | CGR1A331H63  | 1    |
|    | 2 COVER B                     | CGR1A332H63  | 1    |
|    | 3 SHEET,FRONT COVER           | CQE1A219Z  | 1    |
|    | 4 PAD, COVER                  | CPS1A676   | 1    |
|    | 5 BAG,POLY                    |  | 1    |
| 11 | IMAGE BROCHURES               |  | 1    |

### 2. Package Drawing

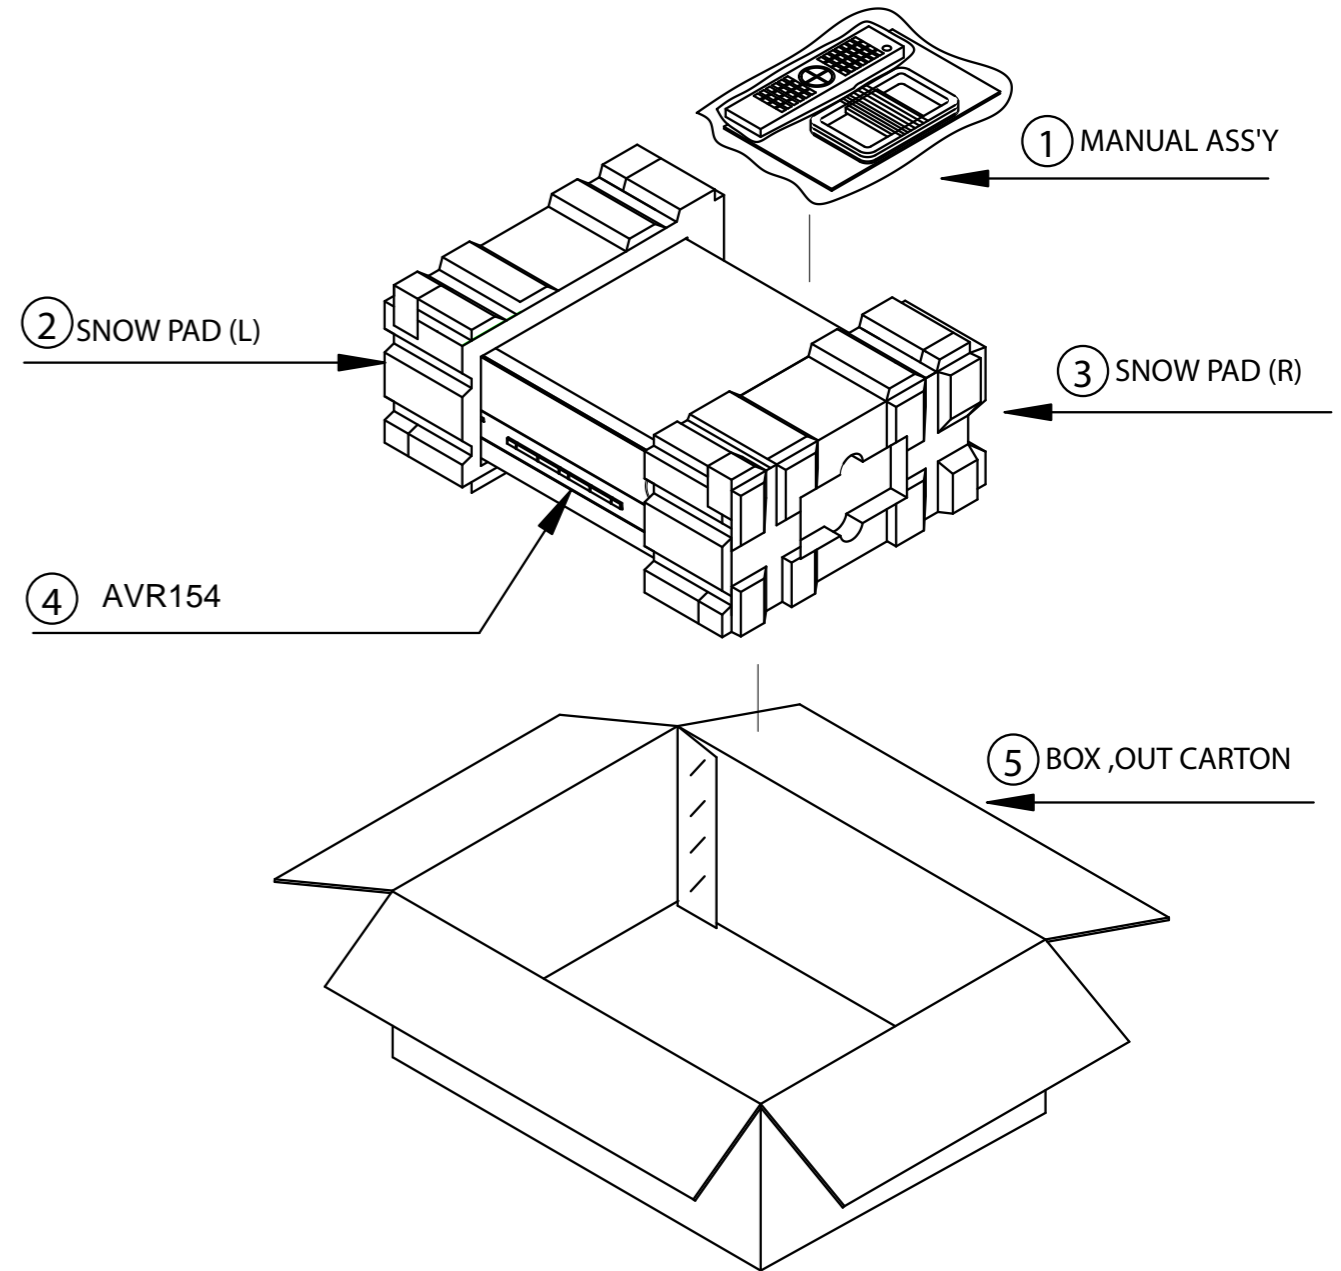

| NO | DESCRIPTION    | PARTS NO. | Q,ty |
|----|----------------|-----------|------|
| 1  | MANUAL ASS'Y   |           | 1    |
| 2  | SNOW,PAD(L)    | CPS5A564  | 1    |
| 3  | SNOW,PAD(R)    | CPS5A565  | 1    |
| 4  | AVR154         | AVR 154   | 1    |
| 5  | BOX,OUT CARTON | CPG1A854Z | 1    |