


# FL 8385 FRONT-PANEL INFORMATION DISPLAY

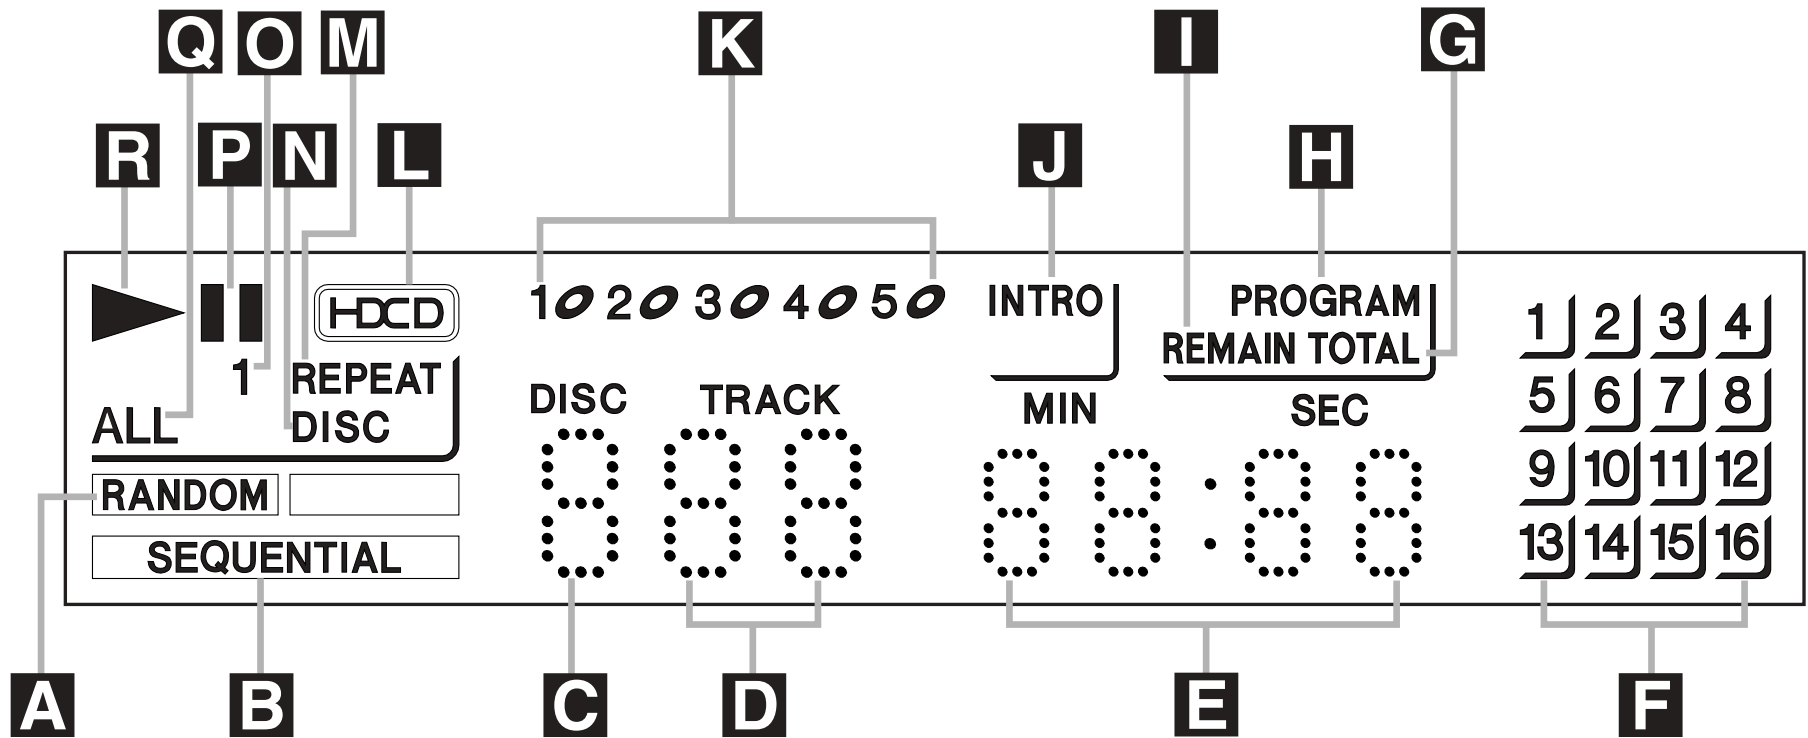

- A** Random Indicator
- B** Sequential Indicator
- C** Disc Number Display
- D** Track Number Display
- E** Time Display
- F** Remaining Tracks Display

- G** Total Time Indicator
- H** Program Indicator
- I** Remaining Time Indicator
- J** Intro Scan Indicator
- K** Loaded Disc Indicators
- L** HDCD Indicator

- M** Repeat Indicator
- N** Disc Mode Indicator
- O** Single Mode Indicator
- P** Pause Indicator
- Q** All Mode Indicator
- R** Play Indicator