


# DVD 47 FRONT-PANEL INFORMATION DISPLAY

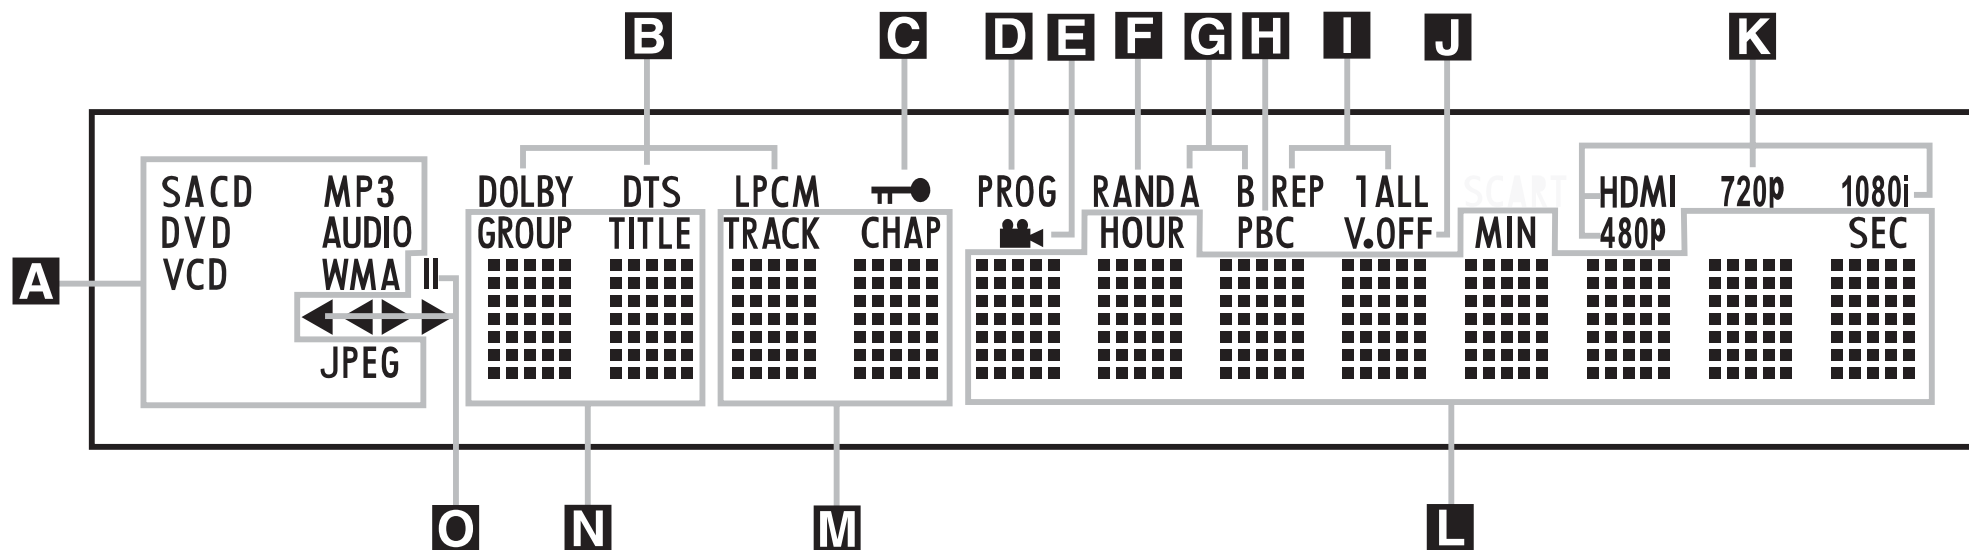

**A** Disc-Type Indicators

**B** Audio Bitstream Indicators

**C** Parental Lock Indicator

**D** Program Indicator

**E** Angle Indicator

**F** Random Indicator

**G** A-B Repeat Indicator

**H** VCD Playback Control Indicator

**I** Repeat Indicators

**J** V-OFF Indicator

**K** Video Indicators

**L** Time Indicators

**M** Chapter/Track Number Indicators

**N** Group/Title Indicators

**O** Playback-Mode Indicator