


# DVD 27 FRONT-PANEL CONTROLS

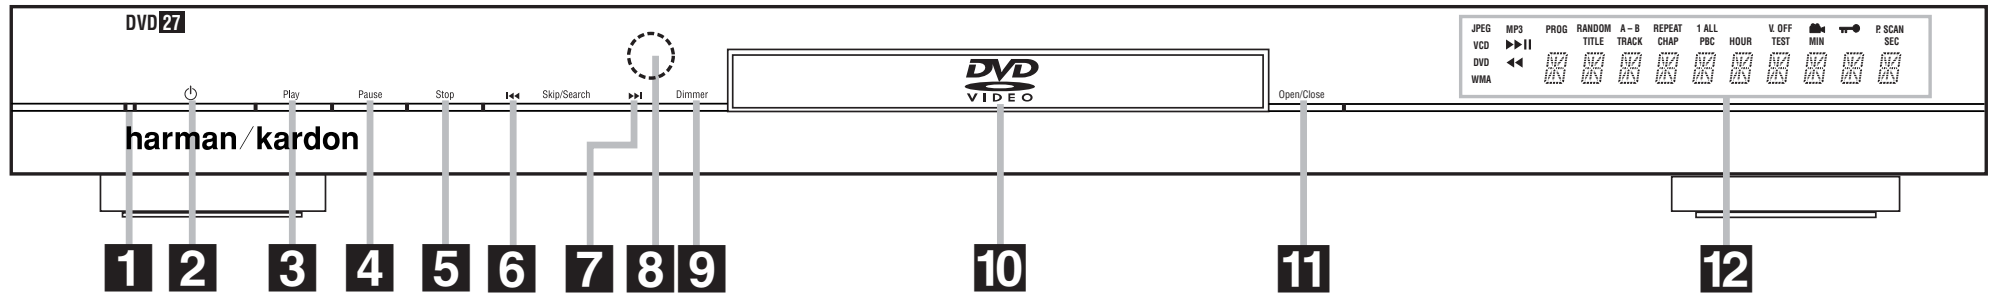

- |                                 |                               |
|---------------------------------|-------------------------------|
| <b>1</b> Power Indicator        | <b>8</b> Remote Sensor        |
| <b>2</b> Power On/Off (Standby) | <b>9</b> Display Dimmer       |
| <b>3</b> Play                   | <b>10</b> Disc Drawer         |
| <b>4</b> Pause                  | <b>11</b> Open/Close          |
| <b>5</b> Stop                   | <b>12</b> Information Display |
| <b>6</b> Skip/Search Reverse    |                               |
| <b>7</b> Skip/Search Forward    |                               |