


DPR 1005 FRONT-PANEL CONTROLS

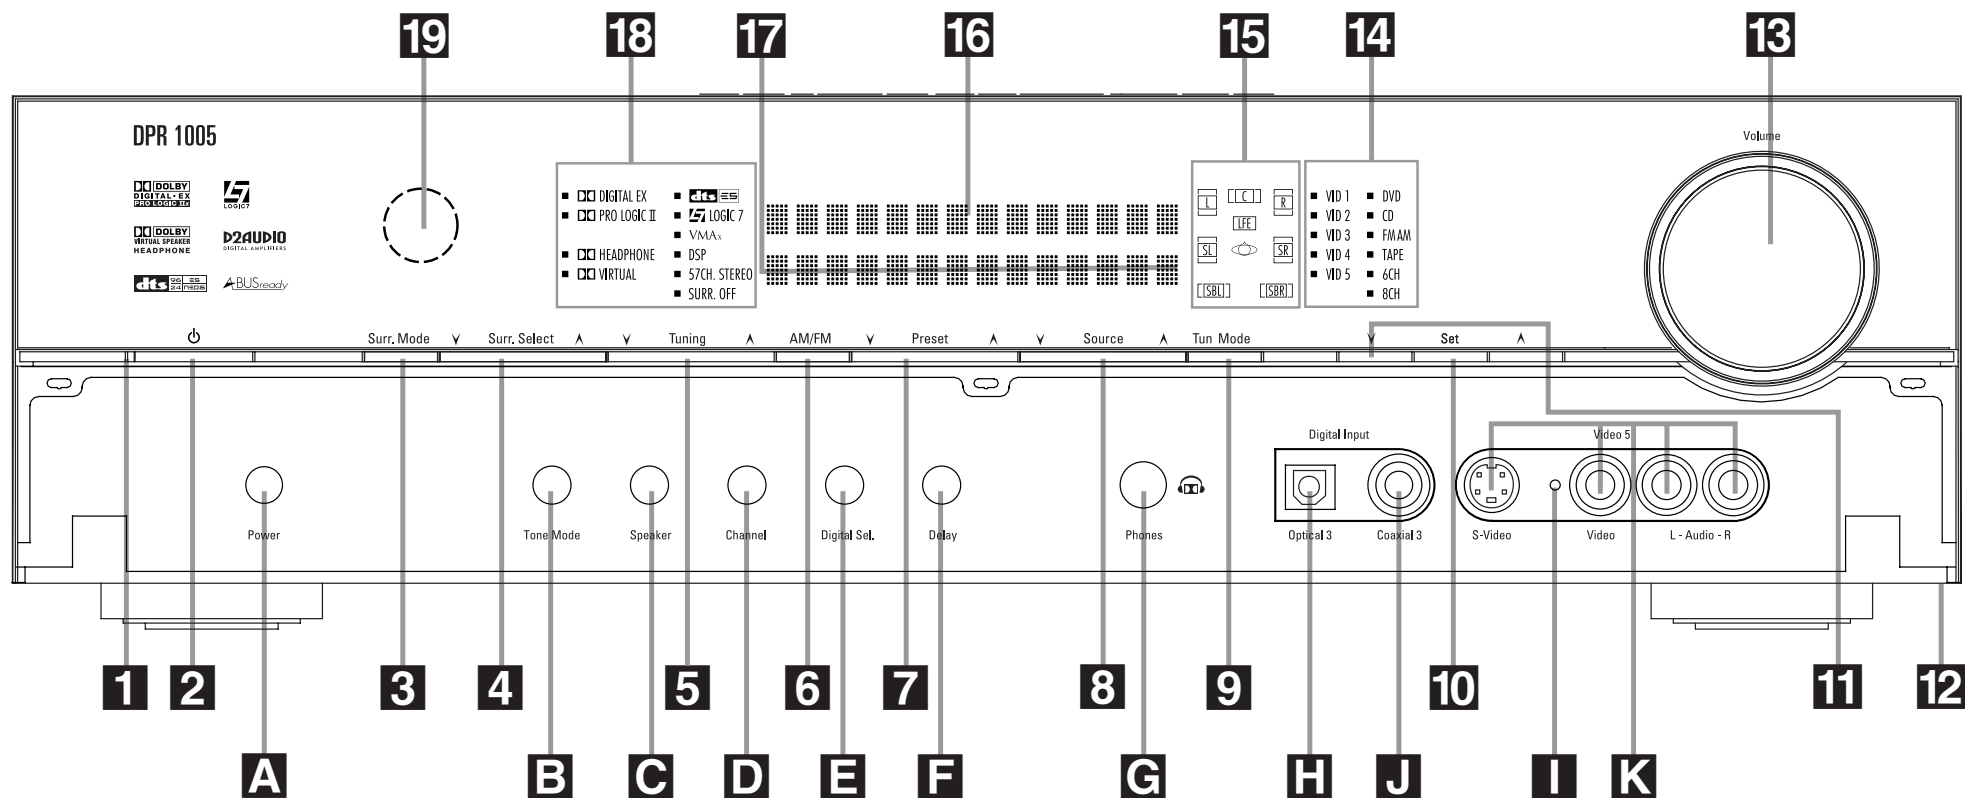

The following controls and indicators are available on the DPR 1005's front panel:

- | | | | |
|---------------------------------------|----------------------------------|--|------------------------------------|
| 1 Standby/On Indicator | 6 Tuner Band Selector | 11 ▼/▲ Buttons | 16 Upper Display Line |
| 2 Standby/On Button | 7 Preset Station Selector | 12 Front-Panel Control Door | 17 Lower Display Line |
| 3 Surround Mode Group Selector | 8 Input Source Selector | 13 Volume Control | 18 Surround Mode Indicators |
| 4 Surround Mode Selector | 9 Tuning Mode Selector | 14 Input Indicators | 19 Remote Sensor Window |
| 5 Tuning Selector | 10 Set Button | 15 Speaker/Channel Input Indicators | |

The following controls and jacks are located behind the front-panel door. To open the door, press the center of the door and gently swing it down towards you.

- | | | | |
|----------------------------------|----------------------------------|----------------------------------|------------------------------------|
| A Main Power Switch | D Channel Adjust Selector | G Headphone Jack | J Coaxial 3 Digital Input |
| B Tone Mode Button | E Digital Input Selector | H Optical 3 Digital Input | K Video 5 Audio/Video Jacks |
| C Speaker Selector Button | F Delay Adjust Selector | I Input/Output Indicator | |