


DVD 37 FRONT-PANEL CONTROLS

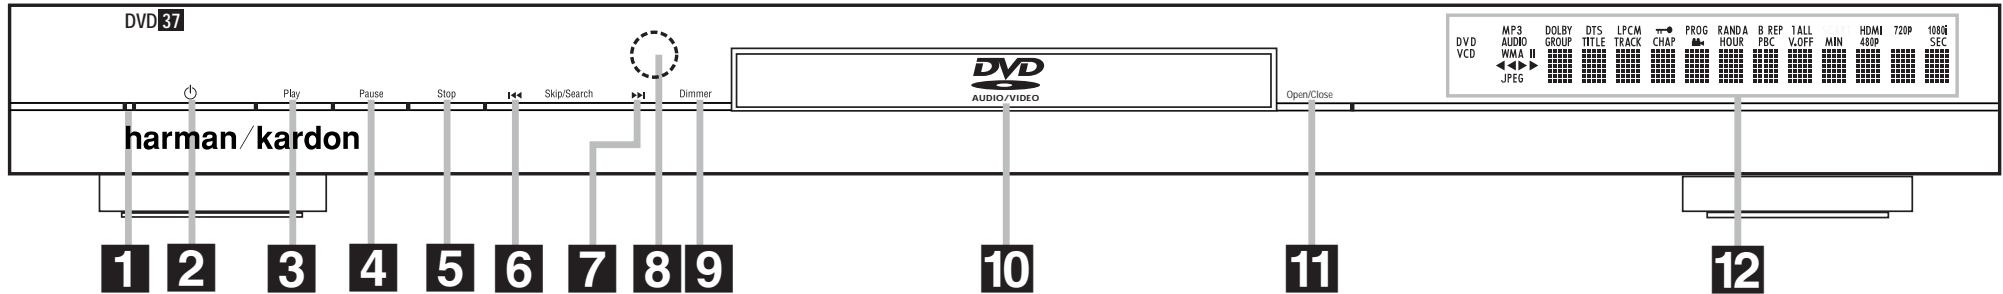

- | | |
|---------------------------------|-------------------------------|
| 1 Power Indicator | 7 Skip/Search Forward |
| 2 Power On/Off (Standby) | 8 Remote Sensor |
| 3 Play | 9 Display Dimmer |
| 4 Pause | 10 Disc Drawer |
| 5 Stop | 11 Open/Close |
| 6 Skip/Search Reverse | 12 Information Display |