

AVR 340 ZONE II REMOTE CONTROL FUNCTIONS

- A** Power Off Button
- B** AVR Selector
- C** AM/FM Tuner Selector
- D** Input Selectors
- E** Preset Up/Down – Track Skip Buttons
- F** Disc Skip Buttons
- G** Volume Up/Down Buttons
- H** Pause Button
- I** Stop Button
- J** Play Button
- K** Tuning Up/Down – Fast Play Buttons
- L** Mute Button

