

FL 8385 REMOTE CONTROL FUNCTIONS

- 1** Disc-Select Buttons
- 2** Numeric Buttons
- 3** Clear Button
- 4** Search Buttons
- 5** Skip Buttons
- 6** Stop Button
- 7** Play Button
- 8** Random Button
- 9** Pause Button
- 10** Program Button
- 11** Time Button
- 12** Intro Button
- 13** Repeat Button
- 14** Disc Skip Buttons
- 15** Power On Button
- 16** Power Off Button

