


# AVR 525 FRONT PANEL CONTROLS

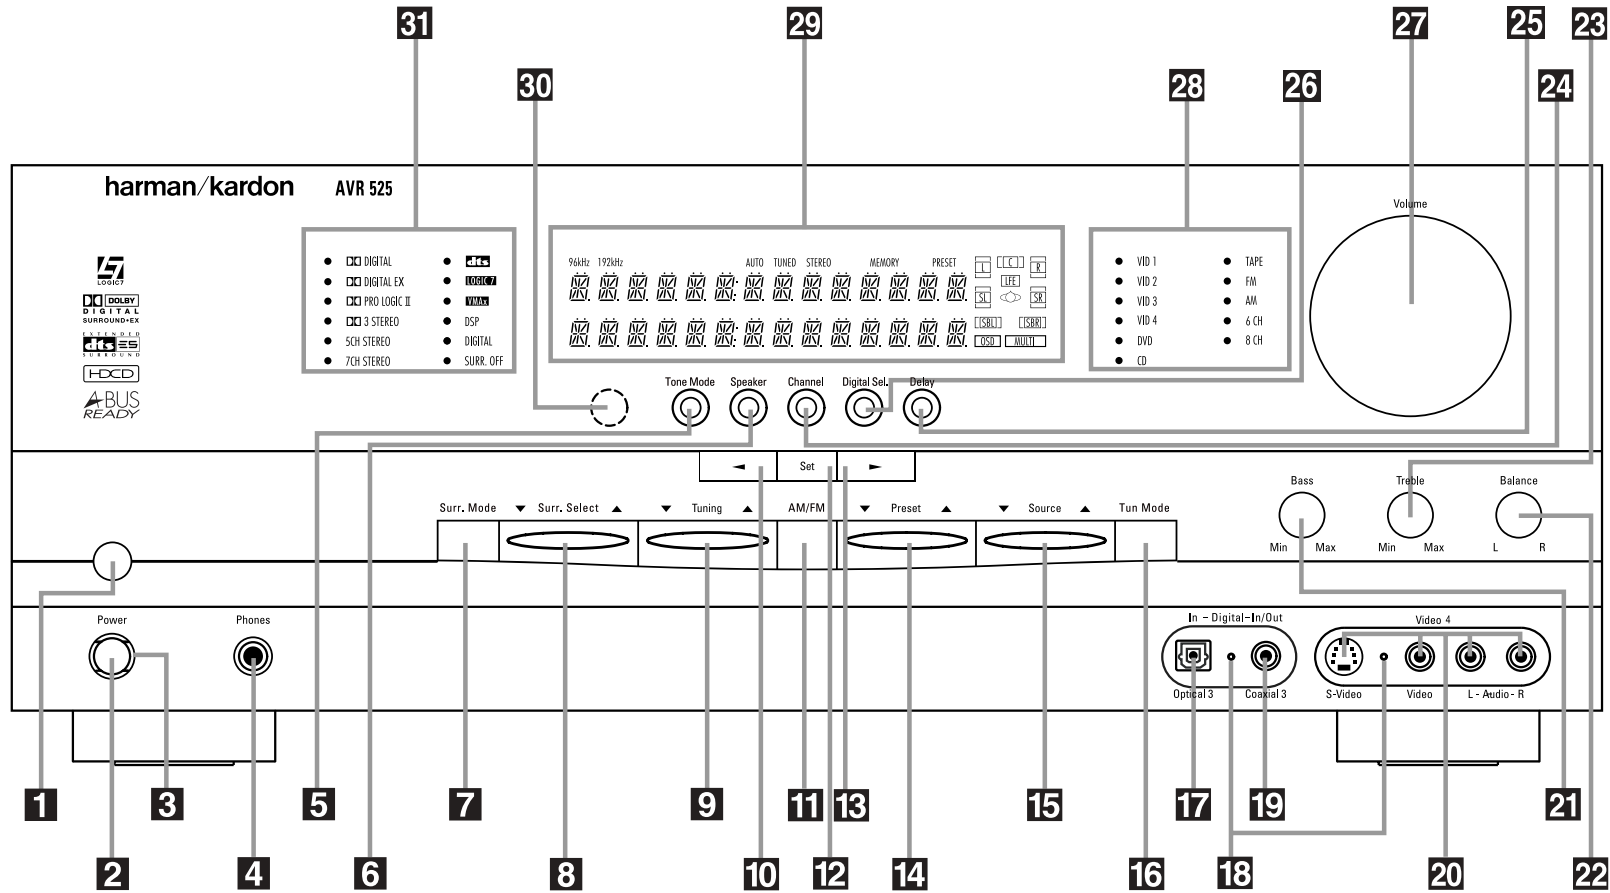

- |                                       |  |                                    |
|---------------------------------------|--|------------------------------------|
| <b>1</b> Main Power Switch            | <b>12</b> Set Button                     | <b>23</b> Treble Control           |
| <b>2</b> System Power Control         | <b>13</b> ► Button                       | <b>24</b> Channel Adjust Selector  |
| <b>3</b> Power Indicator              | <b>14</b> Preset Station Selector        | <b>25</b> Delay Adjust Selector    |
| <b>4</b> Headphone Jack               | <b>15</b> Input Source Selector          | <b>26</b> Digital Input Selector   |
| <b>5</b> Tone Mode                    | <b>16</b> Tuner Mode Selector            | <b>27</b> Volume Control           |
| <b>6</b> Speaker Selector             | <b>17</b> Optical 3 Digital Input        | <b>28</b> Input Indicators         |
| <b>7</b> Surround Mode Group Selector | <b>18</b> Input/Output Status Indicator  | <b>29</b> Main Information Display |
| <b>8</b> Surround Mode Selector       | <b>19</b> Coaxial 3 Digital Input/Output | <b>30</b> Remote Sensor Window     |
| <b>9</b> Tuning Selector              | <b>20</b> Video 4 Input/Output Jacks     | <b>31</b> Surround Mode Indicators |
| <b>10</b> ◀ Button                    | <b>21</b> Bass Control                   |                                    |
| <b>11</b> Tuner Band Selector         | <b>22</b> Balance Control                |                                    |