

DVD 31 REMOTE CONTROL FUNCTIONS

- 1** Power On
- 2** Playlist
- 3** Audio Select
- 4** Open/Close
- 5** ▲/▼/◀/▶ Navigation Buttons
- 6** Info
- 7** Pause
- 8** Play
- 9** Previous Step/Skip
- 10** Search/Slow Reverse
- 11** Stop
- 12** Video Off
- 13** Display
- 14** Title
- 15** Clear
- 16** Numeric Keys
- 17** Light
- 18** A-B Repeat
- 19** Angle
- 20** Zoom
- 21** Picture -/+
- 22** Search/Slow Forward
- 23** Next Step/Skip
- 24** Status
- 25** Disc Menu
- 26** Enter
- 27** OSD
- 28** Subtitle
- 29** Power Off
- 30** Random
- 31** Repeat
- 32** IR Emitter

